
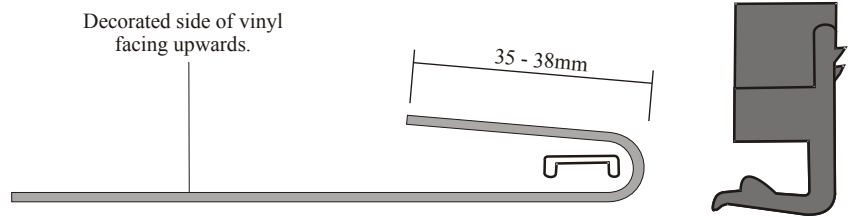
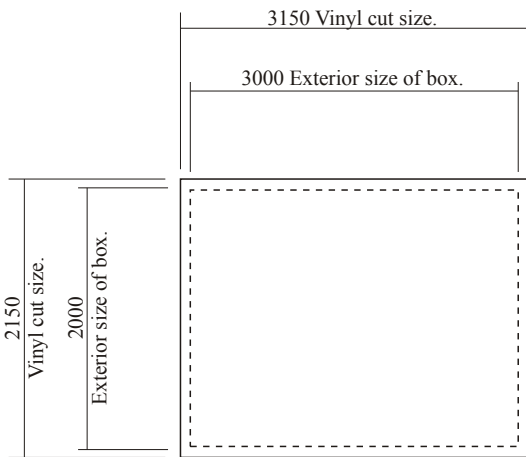


Econoflex #7010 Flat top (199mm) With 2121 cover

Assembled frame and vinyl sizes.

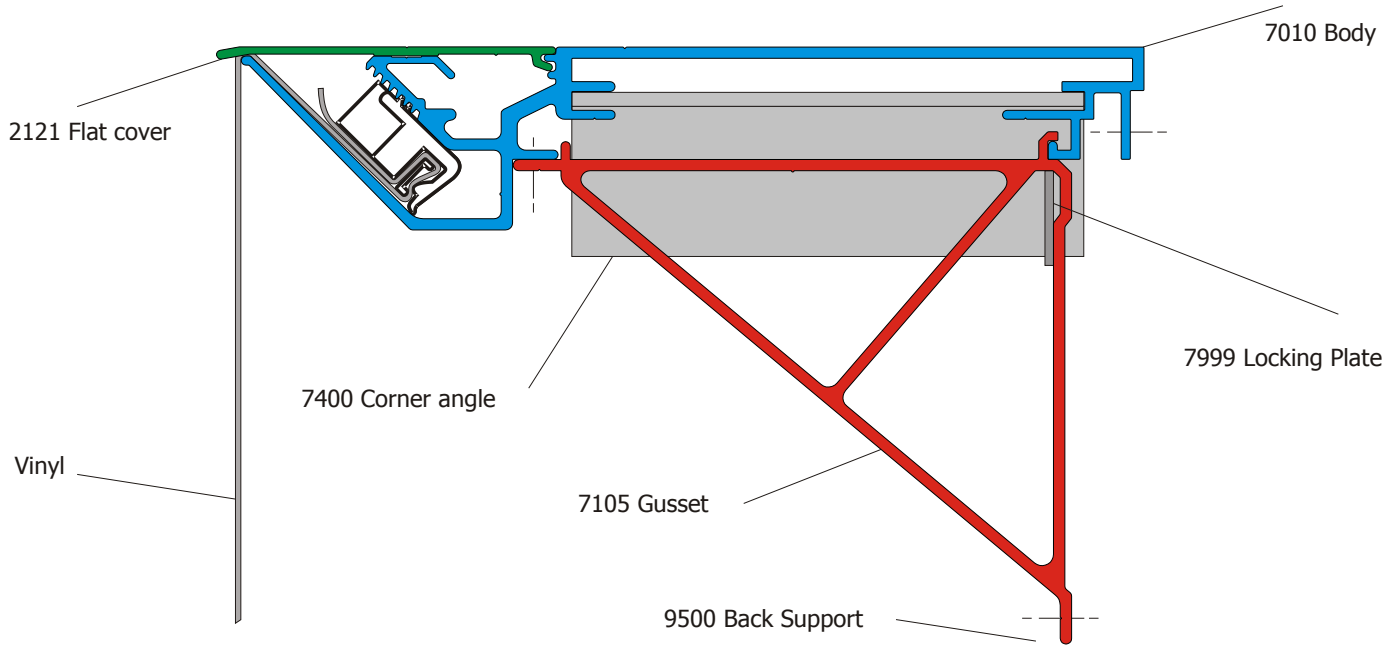

Vinyl cutting sizes

Add 150mm to the height and width (75mm on each side) of the finished size of the frame #7000
ie. For a frame that has overall measurements of 3000 x 2000mm,
the vinyl should measure 3150 x 2150mm.